

8

4

3

8

 
4

3

B



# Service Manual

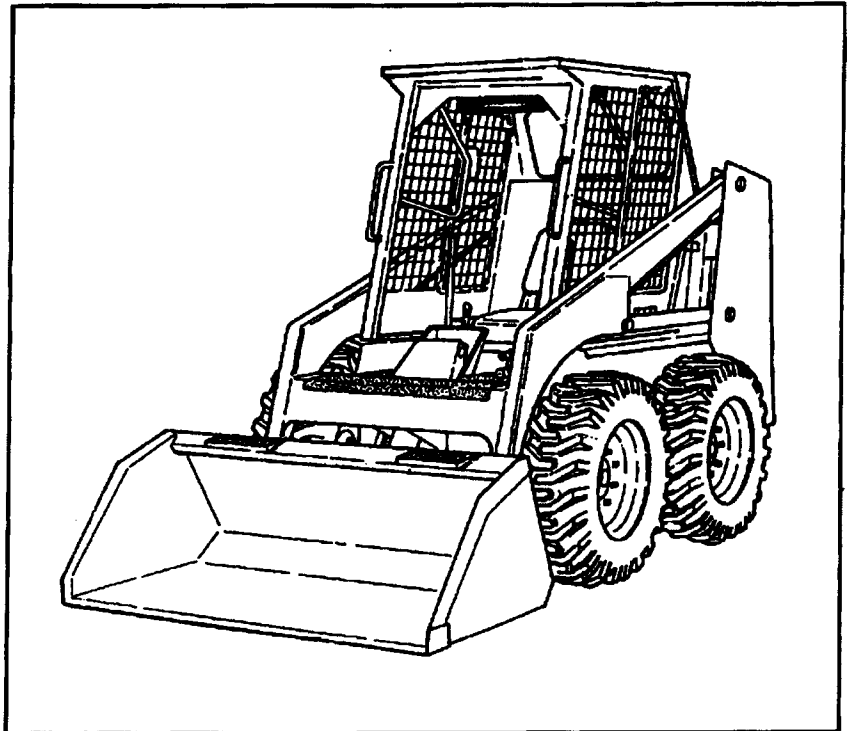


**MELROE**  
**INGERSOLL-RAND**

6566091 (12-85)

Printed in U.S.A.



 © Melroe Company 1985

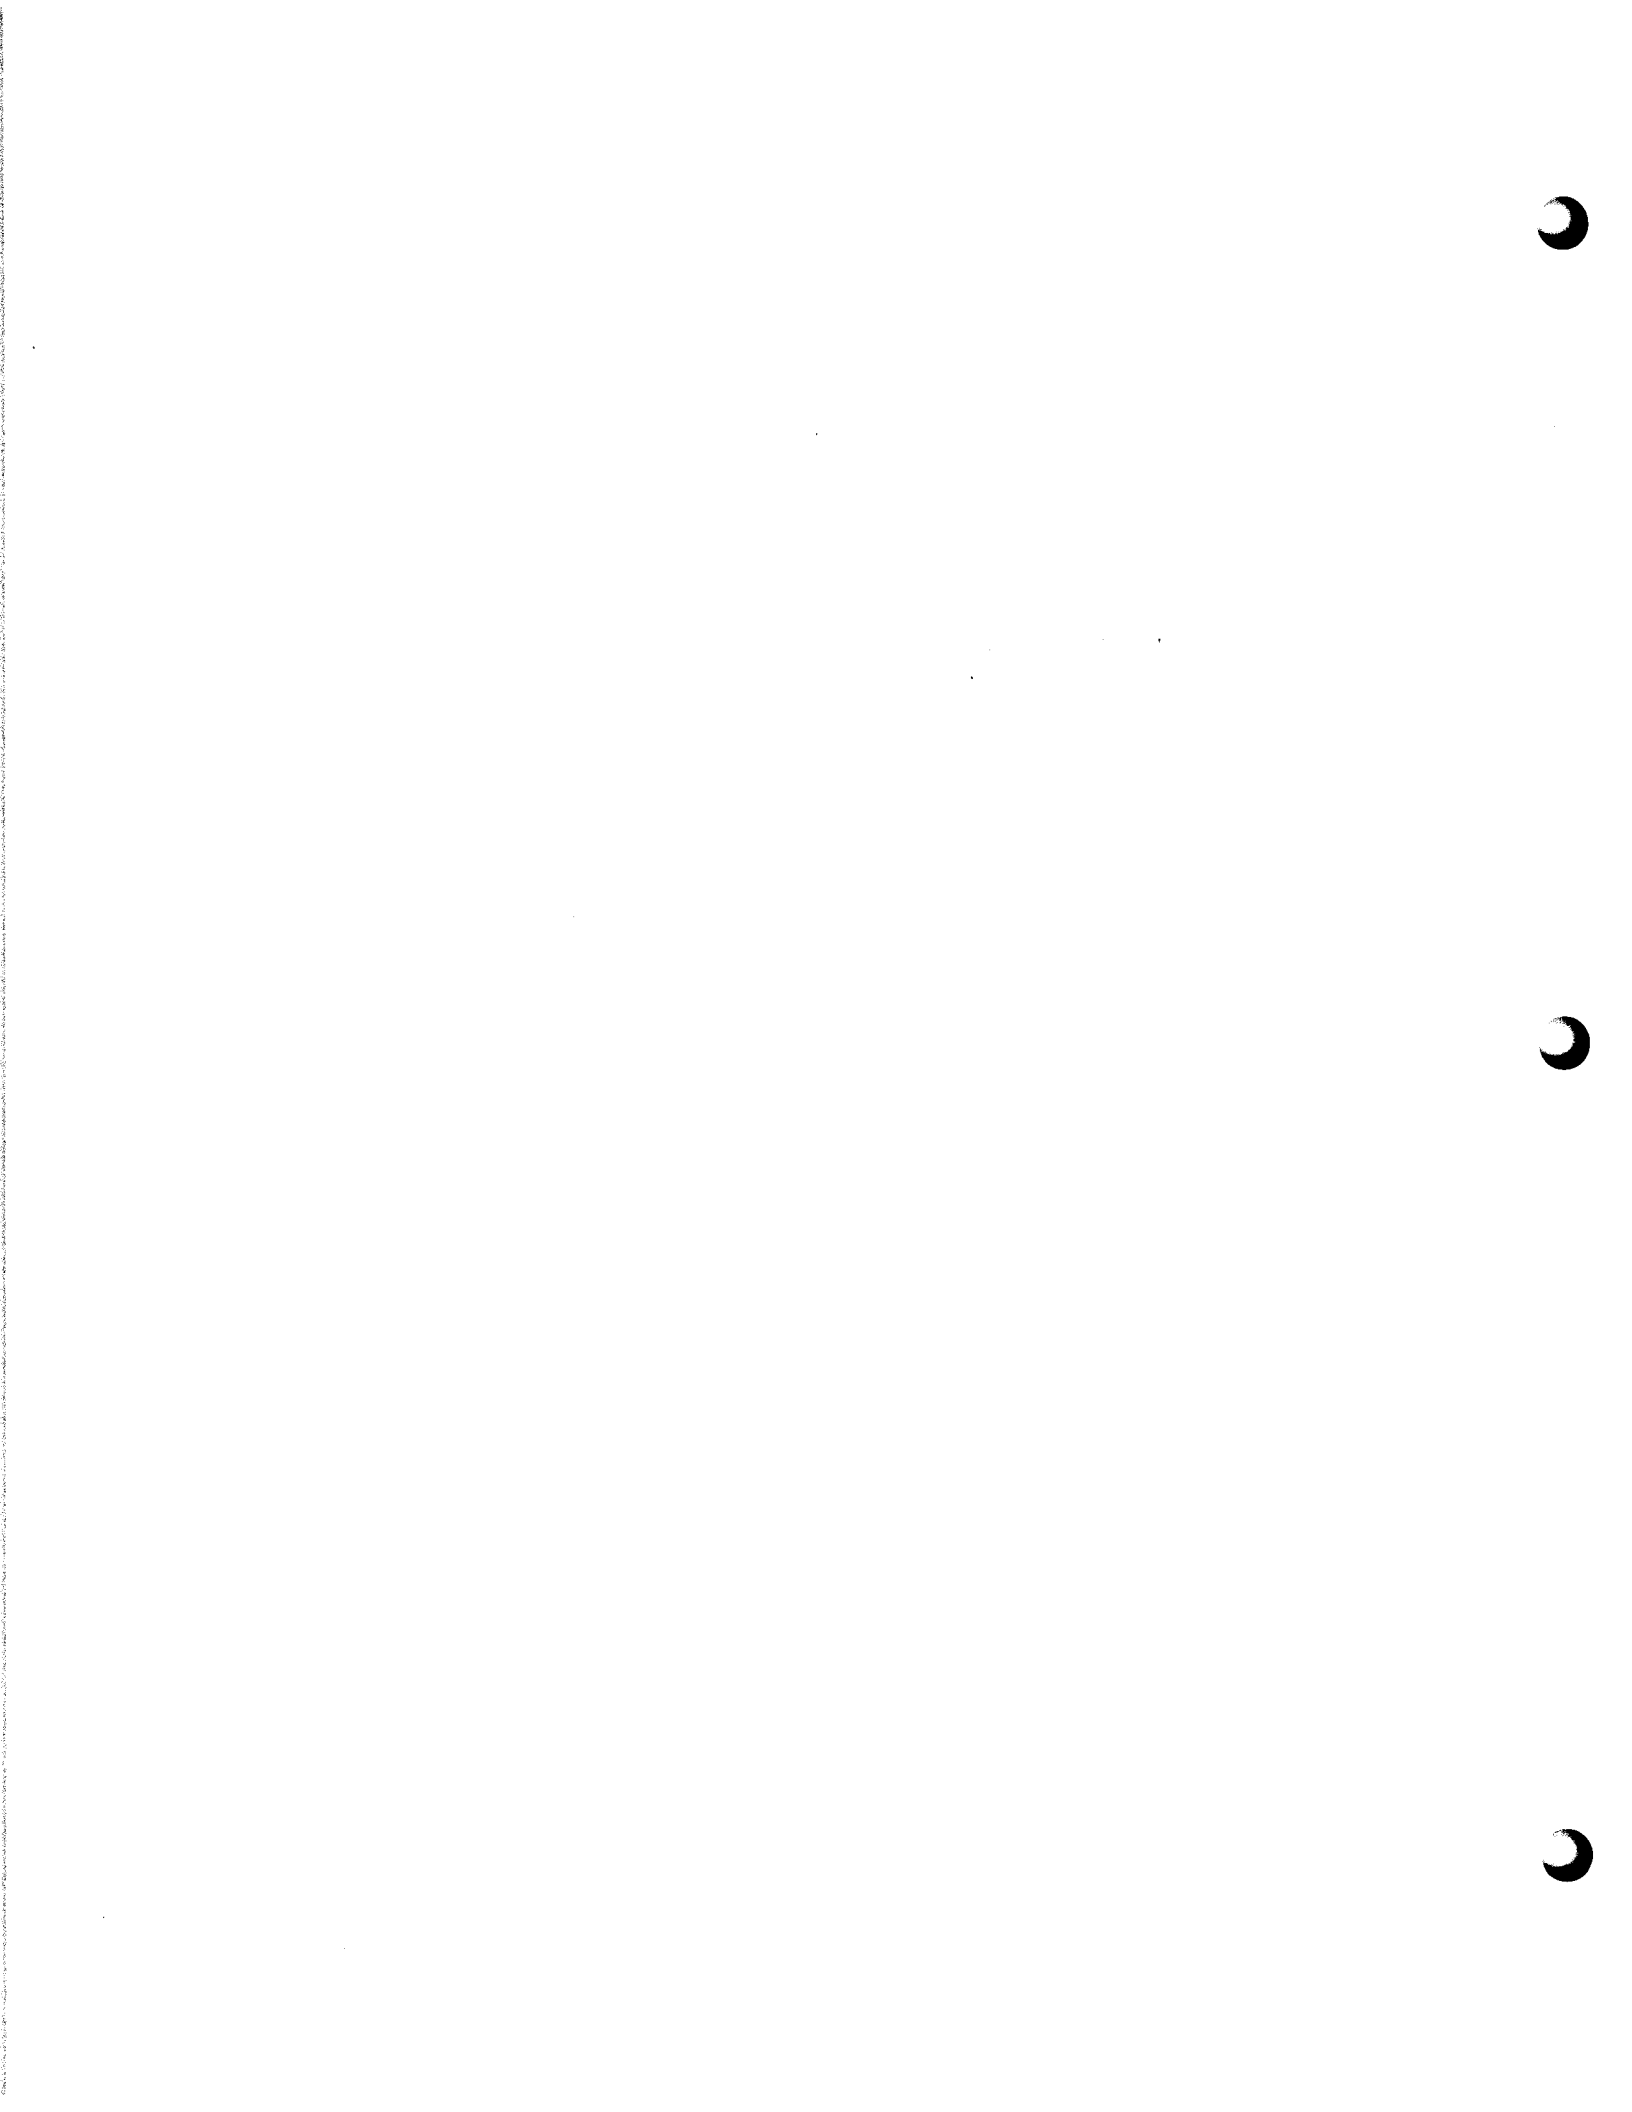

# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

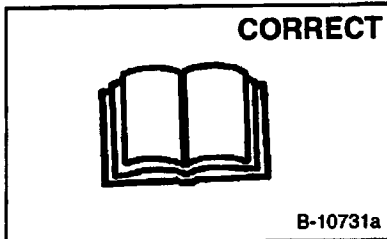

 
- ⚠ Never service the Bobcat Skid-Steer Loader without instructions.

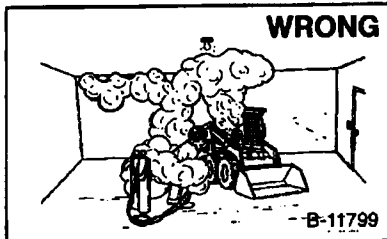

 
- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

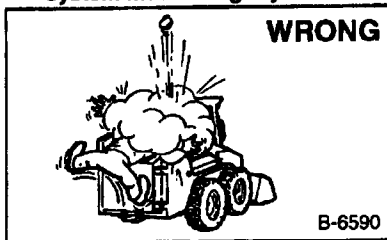

 
- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

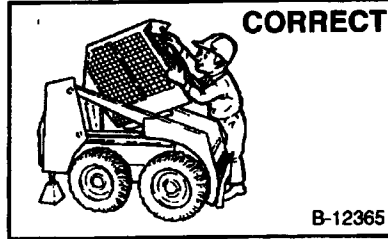

 
- ⚠ Use the correct procedure to lift or lower operator cab.

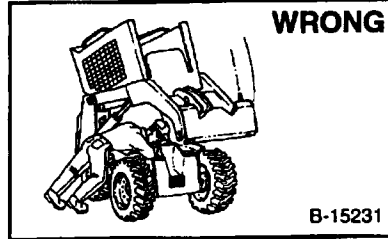

 
- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

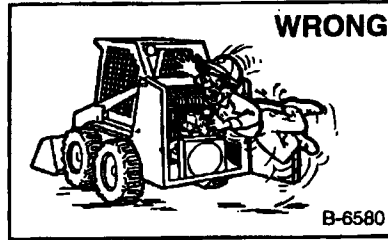

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

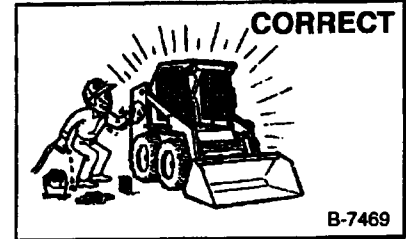 

 - ⚠ Cleaning and maintenance are required daily.

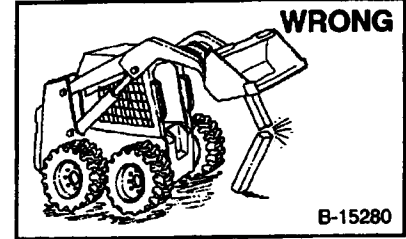

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.




- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.


Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805

 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

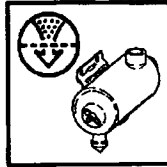

 
18. Check the electrical charging system.

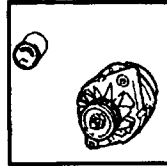

 
19. Check tires for wear and pressure.

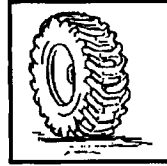

 20. Inspect for loose or broken parts or connections.

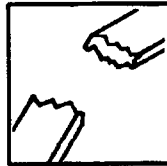

 
21. Operate the loader and check all functions.

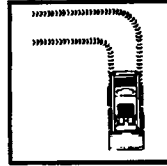


22. Check for any field modification not completed.



 23. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

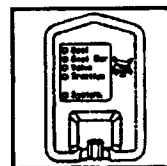

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

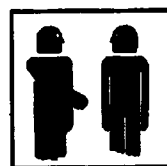

## SAFETY INSTRUCTIONS

# ⚠ WARNING

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-0797

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance manuals can be read from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of the following languages: French, German, Italian, Dutch & Spanish.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator training Course is available through your local Bobcat dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.

# ⚠ WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

# IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

## FIRE PREVENTION

 
The loader has several components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase the fire hazard. The loader must be cleaned as often as necessary to avoid this accumulation. Flammable debris in the engine compartment is a fire hazard when the loader is parked with a hot engine.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on this engine. It has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance Manual for connecting the battery.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler.
- Know where fire extinguishers and first aid kits are located and how to use them.

A fire extinguisher is available from your Bobcat dealer. The fire extinguisher can be installed in the location shown [A].

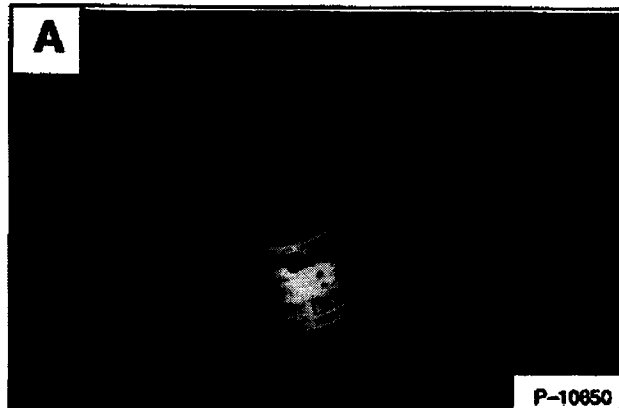

S106-0398


## SERIAL NUMBER LOCATIONS

 Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

### LOADER SERIAL NUMBER

The loader serial number plate is located on the inside of the left upright, above the grill [A].

Explanation of loader Serial Number:

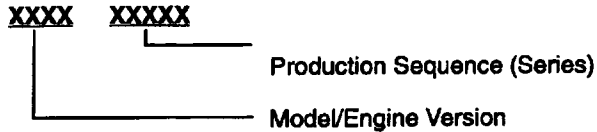

### ENGINE SERIAL NUMBER

#### Perkins (4.154)

The engine serial number is on the left side of the engine block, above the fuel injection pump [B].

#### Perkins TK200 (4.154)

 
 
 
 
The engine serial number is on the left side of the engine block, above the fuel injection pump [B].

#### Isuzu 4JB1-PK01

The engine serial number is located on the fuel injection pump side and at the rear of the engine block [C].

### DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [D].

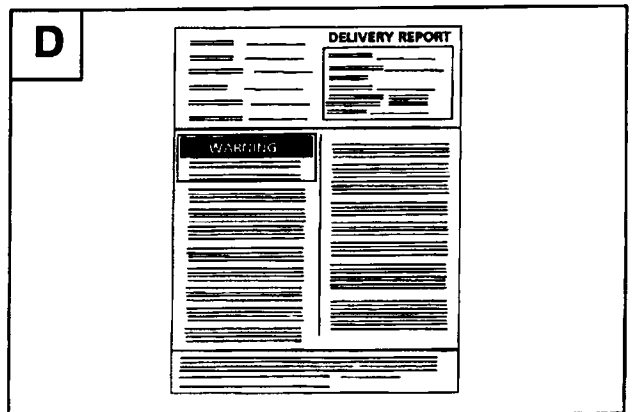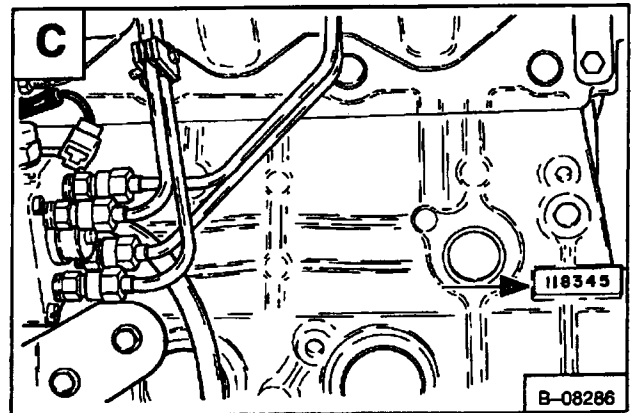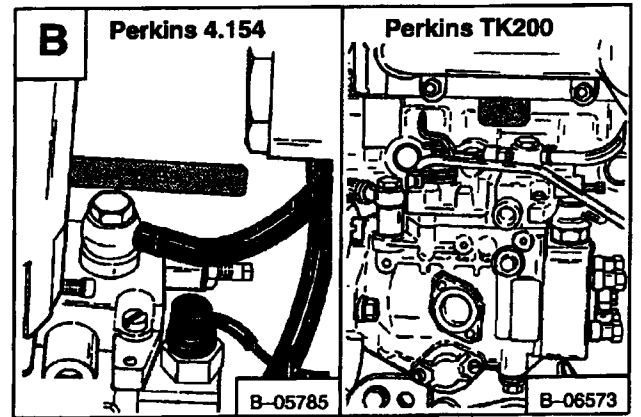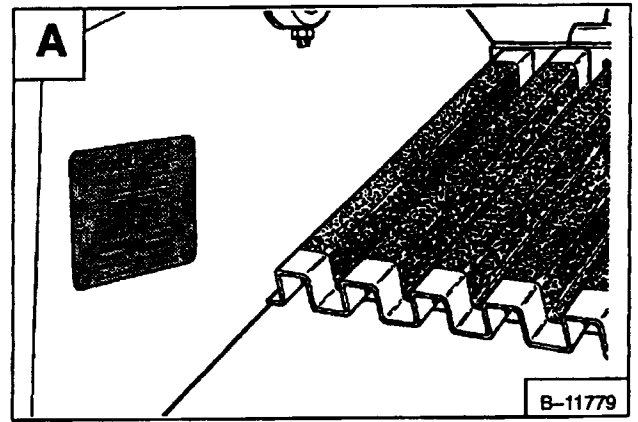

## HYDRAULIC SYSTEM (Cont'd)

	Page Number
<b>HYDRAULIC SYSTEM INFORMATION</b>	
Flare Connections . . . . .	2-2
Straight Thread O-Ring Fitting . . . . .	2-2
Tubelines and Hoses . . . . .	2-2
<b>LIFT CYLINDERS</b>	
Checking the Lift Cylinder(s) . . . . .	2-3
Removal and Installation . . . . .	2-3
<b>PEDAL LOCK LINKAGE</b>	
Adjustment . . . . .	2-62
<b>PORT BLOCK (S/N 14999 &amp; Below)</b>	
40 Micron Filter (Bronze) . . . . .	2-51
Neutral By-Pass Valve . . . . .	2-52
Removal and Installation . . . . .	2-52
<b>PORT BLOCK (S/N 15001 &amp; Above)</b>	
Charge By-Pass . . . . .	2-56
Cold Oil By-Pass . . . . .	2-56
Removal and Installation . . . . .	2-55
<b>TILT CYLINDER</b>	
Checking the Tilt Cylinder . . . . .	2-5
Removal and Installation . . . . .	2-5
Rod End Seal . . . . .	2-6
<b>TILT CYLINDER (CESSNA)</b>	
Assembly . . . . .	2-9
Disassembly . . . . .	2-7
<b>TROUBLESHOOTING</b>	
Chart . . . . .	2-1